 




Canon PowerShot G12 HDMI Port Replacement

Replacing the Canon PowerShot G12 HDMI port.

Written By: Nathan Meuwissen

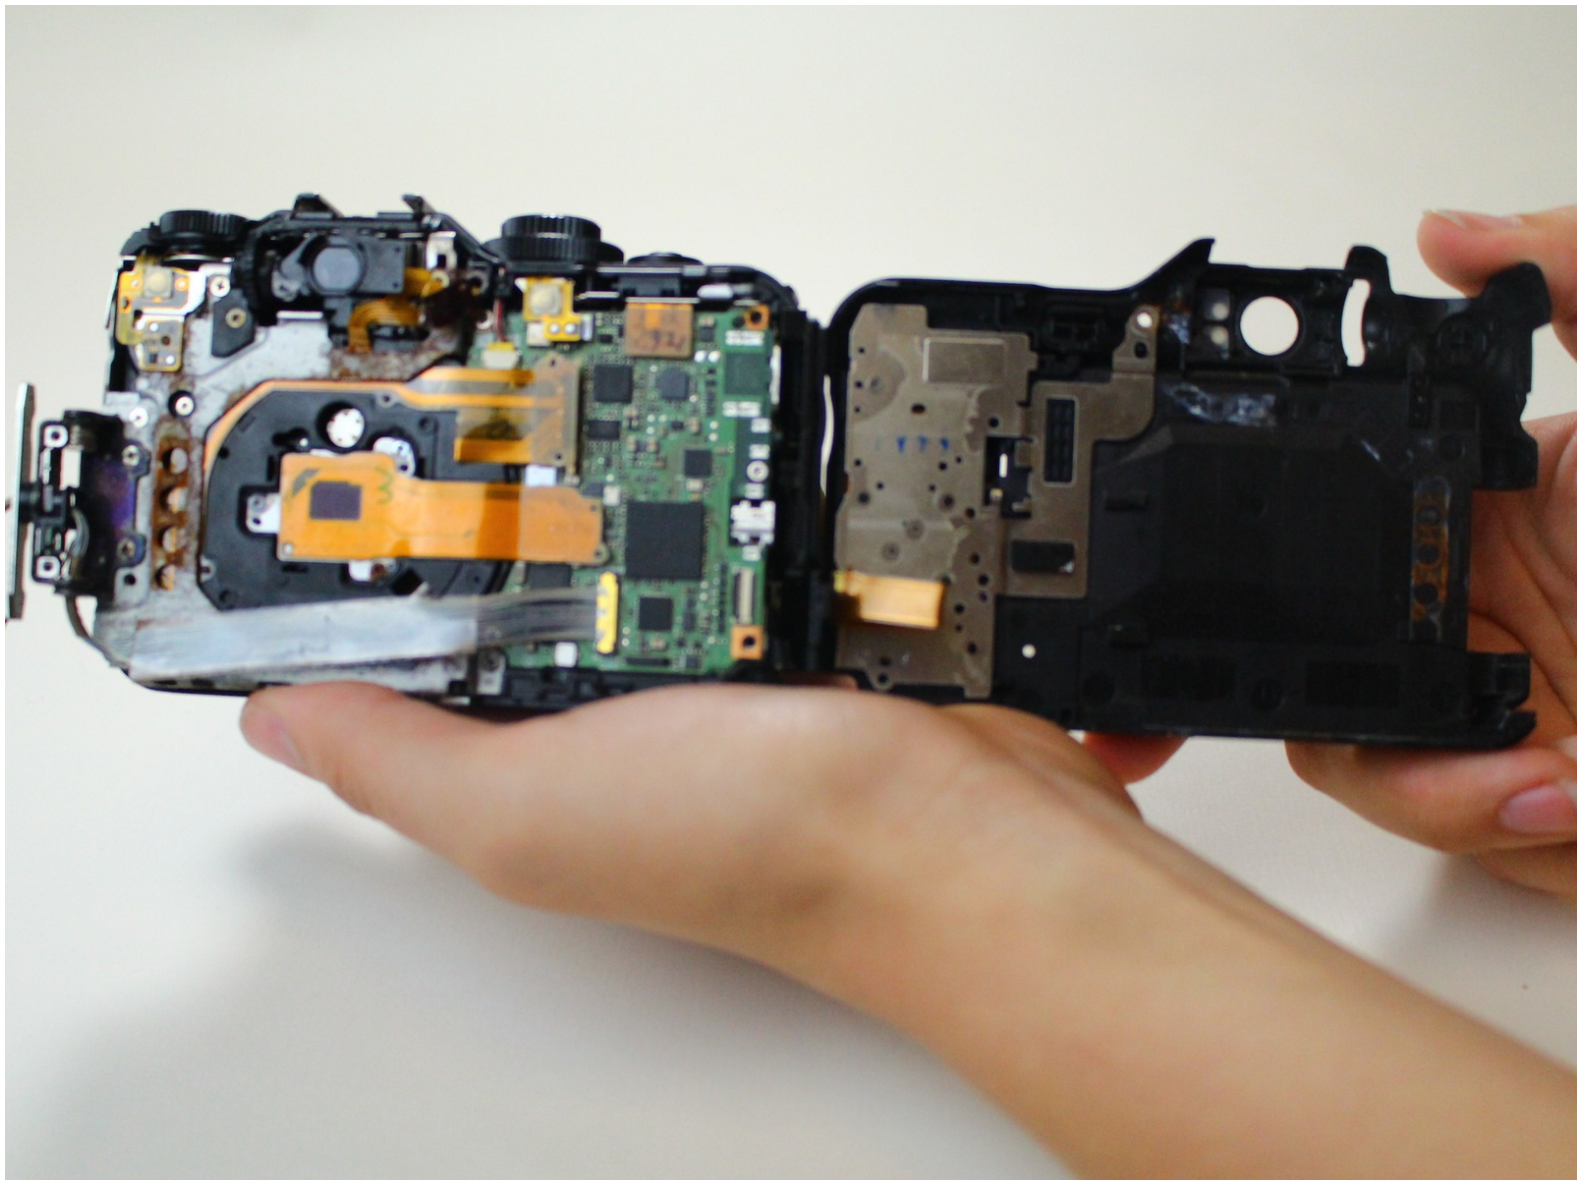

INTRODUCTION

Replacing the Canon-PowerShot G12 HDMI port is a highly-invasive step-intensive process that becomes necessary if the HDMI port sustains damage due to a crack, water, or jams, or if the HDMI port no longer functions properly.

In this guide, you will learn how to replace the HDMI port carefully without damaging any essential internal components.



TOOLS:

 
- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:


- [Canon PowerShot G12 HDMI Port](#) (1)

Step 1 — HDMI Port

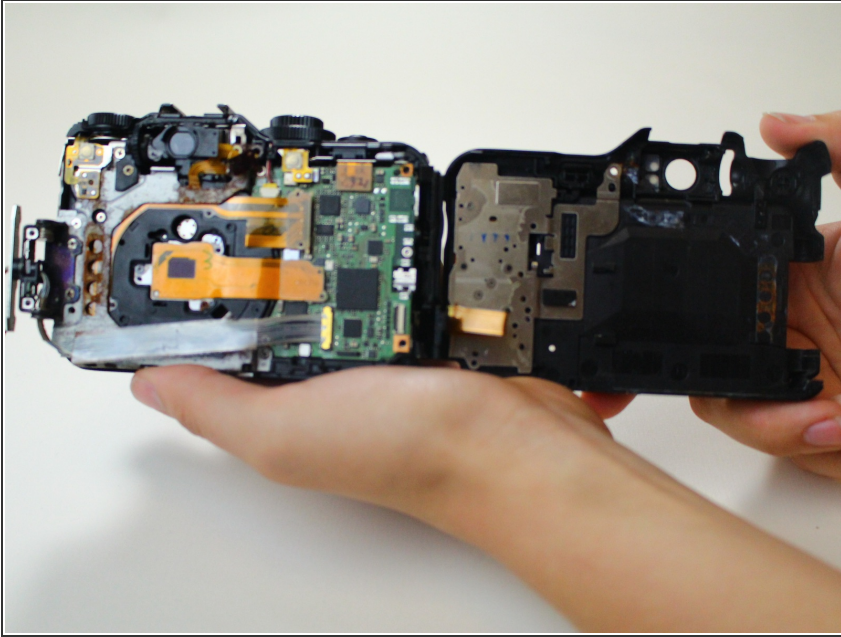


- Open the back cover of the camera, see steps 1-6 in [Canon PowerShot G12 Rear Function Setting Dial Replacement](#)

 Step 2

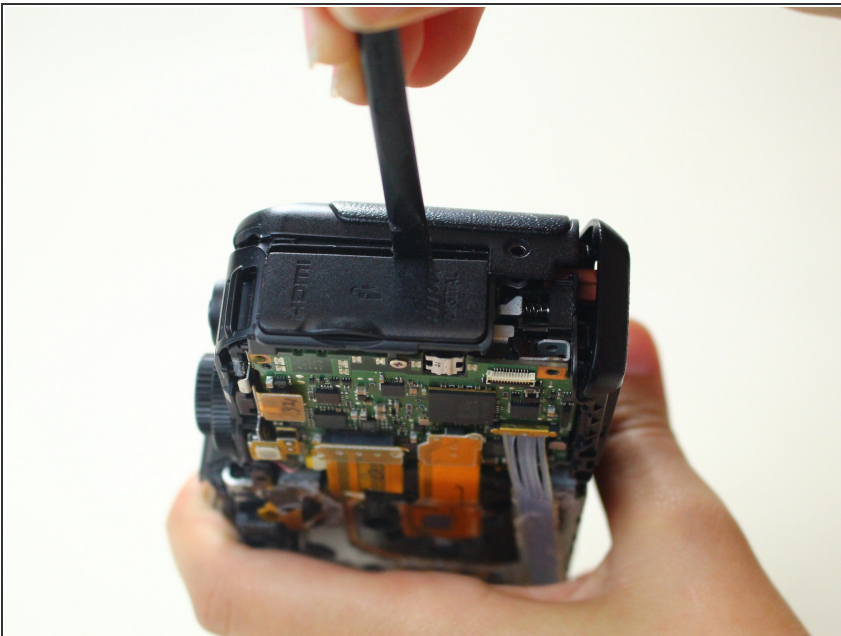

- On the right side of the camera looking from the back, locate the HDMI port and use a spudger to remove it.

 Step 3

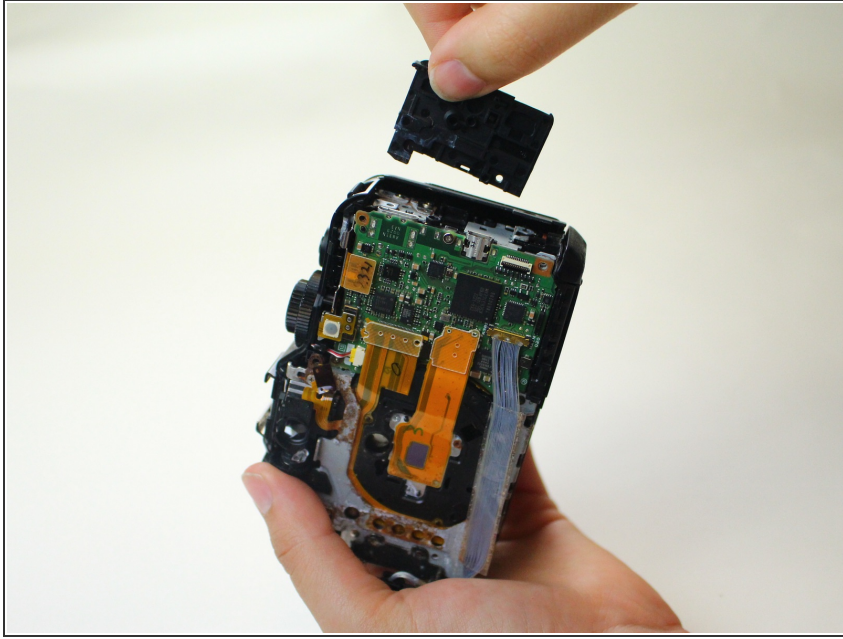

- Insert the new HDMI port until you hear a click on both sides, ensuring the holes match up with the ports on the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 07:36:33 PM.